



ELECTRIC HEATING MAINTENANCE

1. Check all electrical connections
2. Check fuses
3. Check sequence operation
4. Adjust and check thermostat
5. Check fan and limit control
6. Oil blowers and motors
7. Check belt and adjust tension where applicable
8. Check amperage draw on elements
9. Check out complete furnace cycle
10. Set thermostat at desired temperature