



HEAT PUMP WINTER MAINTENANCE

1. Check condenser coil, clean if necessary (Chemicals included)
2. Install gauges and check operating pressures.
3. Check static pressure drop across evaporator coil. (Total Static)
4. Check voltage and amperage to all motors.
5. Check air temperature drop across evaporator.
6. Check for adequate refrigerant charge and possible leaks.
7. Check evaporator superheat.
8. Lubricate all moving parts.
9. Check belt and adjust tension.
10. Check filters.
11. Check pressure switch cut-out settings.
12. Check electrical lockout circuits.
13. Check line starting contactor.
14. Check all wiring and connections.
15. Clean and adjust thermostat.
16. Check air temperature across condenser.
17. Check defrost cycle.
18. Check that condenser drain is open.
19. Perform visual inspection for refrigerant leaks.
20. Check crank-case heater on compressor