



HUMIDIFIER MAINTENANCE

1. Replace water panel – if applicable
2. Clean water reservoir
3. Replace orifice
4. Clean inlet tube
5. Clean inlet orifice (replace if necessary)
6. Clean inside drain panel
7. Clean drain line
8. Clean supply valve
9. Check and adjust Humidistat
10. Check complete operation