



OIL HEATING MAINTENANCE

1. Clean and adjust all safety controls
2. Replace oil nozzle & clean burner
3. Clean base of chimney & flue pipe
4. Check and adjust thermostat anticipator
5. Replace oil filter cartridge & check for oil leaks
6. Check oil pump pressure & adjust if necessary
7. Set & adjust combustion air & draft
8. Lubricate all moving parts
9. Check fan & limit controls
10. Check belt & bearings (Adjust if necessary)
11. Check total static.
12. Check heat exchanger
13. Perform a CO test & record findings
14. Check out complete furnace cycle
15. Set thermostat at desired temperature