



STEAM HUMIDIFIER

1. Empty and clean tank reservoir
2. Clean & inspect heating element
3. Clean & inspect water sensor
4. Clean water sensor compartment
5. Replace In-line filter (extra charge) or clean sediment screen
6. Clean drain line
7. Assemble humidifier & check tank gasket
8. Reset, fill & check complete operation and set humidistat at desired setting